



# TECHNICAL CERTIFICATE

Tent-sauna, fisherman tent, winter tent

**MORZH SKY**

[www.morzh.eu](http://www.morzh.eu)



## Description, purpose

MORZH Sky mobile sauna is perfect for hunting, fishing and camping bath. This tent is equipped with a transparent roof made of thermopolyurethane film (TPU).

## Specifications

Parameters	Morzh
Length, m	2,05
Width, m	2,05
Sidewall height, m	1,7
Center height, m	1,95
Effective area, m <sup>2</sup>	4,1
Tent weight, kg	8.3
Number of berths	1
Kind, dimensions of package	1 bag 60*35*25 cm

## Equipment

1. Frame arc - 2 pcs.
2. Tent awning - 1 pc.
3. Carrying bag - 1 pc.
4. Frame pouch - 1 pc.
5. Wind braces kit (6x3 m) - 1 pc.
6. ZIP (piece of cloth) - 1 pc.
7. Hanging net for storage and drying things (weight limit: no more than 5 kg) - 1 pc.
8. Technical certificate - 1 pc.

The frame of the tent consists of two equal arcs, each consisting of 10 segments of the carcass connected by an elastic band preventing the disintegration of pipes. The material of the carcass tubes, as well as the adapters for connecting equal-sized segments of the carcass, is made of the D16t duralumin alloy pipes.

The tent is made of 3-layer quilted fabric consisting of Oxford 240 / heater 80 g/m<sup>2</sup> / Taffeta 210 RipStop.

The top of the tent is made of polyester fabric Oxford 240 with water repellent impregnation. The inner tent is made of light synthetic Taffeta fabric with reinforcing rip-stop braiding. Between the two layers there is a heater made of Siberia synthetic cloth

with density of 80 gr/m<sup>2</sup>. The lower part of the tent is made of Oxford fabric 240 with a special water-repellent impregnation.

The canvases are quilted by a thermo-stitch.

There is a cutting for the chimney in the tent, made of stainless steel and a special fiberglass with a silicone double sided coating.

## Functional equipment

The entrance is equipped with zippers for easy and quick access to the tent. One of the walls has a window made of transparent film. The tent includes pockets and a net for storing and drying things. The chimney section is made of stainless steel and special fiberglass with a silicone double sided coating, designed for stove installation with 90 mm chimney diameter. To install stove with a smaller diameter of the chimney, it is recommended to use an adapter ring. For air access, a ventilation window is sewn in and closed by a valve and a mosquito net at the bottom of the tent.

## Assembly order

The assembly of the tent should begin with the installation of the frame arcs into the pockets, which are located at the corners of the tent. After installing the frames in pockets, you need to close the zipper to hold the frame inside. After the assembly, you should cut the supplied guy rope into pieces and be sure to install all the wind guys! They are needed to keep the tent firmly in the wind, and also so that the stove does not touch the tent wall. Before installing the stove, be sure to open the valve closing the chimney section. The valve opens downward and is secured with a Velcro tape on the corner brace.

## Precautionary measures

- Carefully fix the tent on the ground to avoid overturning
- Do not use a stove and other heating devices in the tent with the wind more than 10 m/s
- It is not recommended to install a tent close to the crowns of trees and to other tents
- Do not allow intoxicated persons and children use the tent by themselves
- Do not use the gas and flammable substances to ignite the stove
- Use your tent carefully and do not allow heating above 120 degrees Celsius (the material can melt at higher temperatures).

## Rules of operation

The product can be used in temperature modes from -40C to +40C. The installation of all wind braces required. Be sure to observe all safety precautions when installing the stove. Do not install the stove close to the wall of the tent. Use stoves with a spark arrestor. Clean the chimney from soot during prolonged living and use. If there is a warm floor, it is not necessary in sauna mode.

## Storage and transportation

The tent should be kept dry. It is recommended to dry the tent after each use. Shake out the sand and leaves from the tent after each use. Clean the tent from dirt with a soft cloth or sponge and soap. Do not use strong chemical cleaners. Never wash the tent in a washing machine and do not iron it. If the tear appears, try to glue or sew it as fast as possible.

### Warranty Card

Technical control department date « \_\_\_\_ » \_\_\_\_\_ 20 \_\_\_\_ г.

Name: \_\_\_\_\_

Color: \_\_\_\_\_

Date of sale: « \_\_\_\_ » \_\_\_\_\_ 20 \_\_\_\_ г.

Buyer's signature \_\_\_\_\_ / \_\_\_\_\_

### Manufactured by order:

New Solution LLC,

620043, Cherklasskaya str. 9, Sverdlovsk Region

Ekaterinburg, Russia

TIN 6658182671, CRR 665801001

+7 (343) 386-19-75

[www.morzh.eu](http://www.morzh.eu)

